#### TAO Light-USD4

# **TAO Light Option Switch Settings: 1**

Supported bill US\$ 1, 5, 10, 20 4bills.

TAO Light dip-switch settings and functions:

	<u> </u>												
	FUNCTION	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	SW1	SW2	SW3	SW4
	Reject US\$ 1	ON											
*	Accept US\$ 1	OFF											
	Reject US\$ 5		ON										
*	Accept US\$ 5		OFF										
	Reject US\$ 10			ON									
*	Accept US\$ 10			OFF									
	Reject US\$ 20				ON								
*	Accept US\$ 20				OFF								
	Reserved					ON							
*	Reserved					OFF							
	High Acceptance						ON						
*	High Security						OFF						
	Harness Disable							ON					
*	Harness Enable							OFF					
	Inhibit Active High	ON											
*	Inhibit Active Low								OFF				
*	1 pulse / US\$ 1									OFF	OFF		
	2 pulse / US\$ 1		ON OFF										
	4 pulse / US\$ 1									OFF	ON		
	20 pulse / US\$ 1									ON	ON		
*		50m	ns on	/ 50	ms of	f						OFF	OFF
	Interface Timing Conversion	60ms on / 300ms off						ON	OFF				
		30ms on / 50ms off						OFF	ON				
		150m	ns on	/ 150	ms of	f						ON	ON

- ★ Manufacture setting
- Note: (1) Reset the bill acceptor after setting the dip switch.
  - (2) SW7 and SW8 of the 8-switch DIP and the 4-switch DIP are for pulse protocol only.

## **TAO Light Interface Settings: 2 (Pulse)**

	INTERFACE	SW1	SW2	SW3	SW4
*	Credit-Pulse Normal HIGH	ON			
	Credit-Pulse Normal LOW				
*	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
	ICT002U (USB & RS232)		ON	OFF	
	5V Enable Mode		OFF	OFF	
	Reserved				ON
*	Reserved		OFF		

<sup>★</sup> Manufacture setting

### TAO Light Interface Settings: 3 (NISR)

	INTERFACE	SW1	SW2	SW3	SW4
*	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON	ON	
*	NISR Mode		OFF	ON	
	ICT002U (USB & RS232)		ON	OFF	
	5V Enable Mode		OFF	OFF	
*	Reserved				ON
	Reserved				OFF

<sup>★</sup> Manufacture setting

## **TAO Light Interface Settings: 4 (ICT)**

					• •
	INTERFACE	SW1	SW2	SW3	SW4
*	Reserved	ON			
	Reserved	OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
*	ICT002U (USB & RS232)		ON	OFF	
	5V Enable Mode		OFF	OFF	
	Reserved				ON
*	reselved.				OFF

<sup>★</sup> Manufacture setting

#### **TAO Light Interface Settings: 5 (5V Enable)**

	INTERFACE	SW1	SW2	SW3	SW4
*	Credit-Pulse Normal HIGH				
	Credit-Pulse Normal LOW	OFF			
	Pulse Mode		ON	ON	
	NISR Mode		OFF	ON	
	ICT002U (USB & RS232)		ON	OFF	
*	5V Enable Mode		OFF	OFF	
	Reserved				ON
*	reserved		OFF		

<sup>★</sup> Manufacture setting